LOCKWOOD Ø

EDITION 2–AMS

REFER TO THIS MAP AS: NU 19, 20, 21, 22, 23, 24-4
SERIES C501

111

U. S. ARMY TOPOGRAPHIC COMM.

SERIES C501
SHEET NU 19-24, 4
EDITION 2-AMS

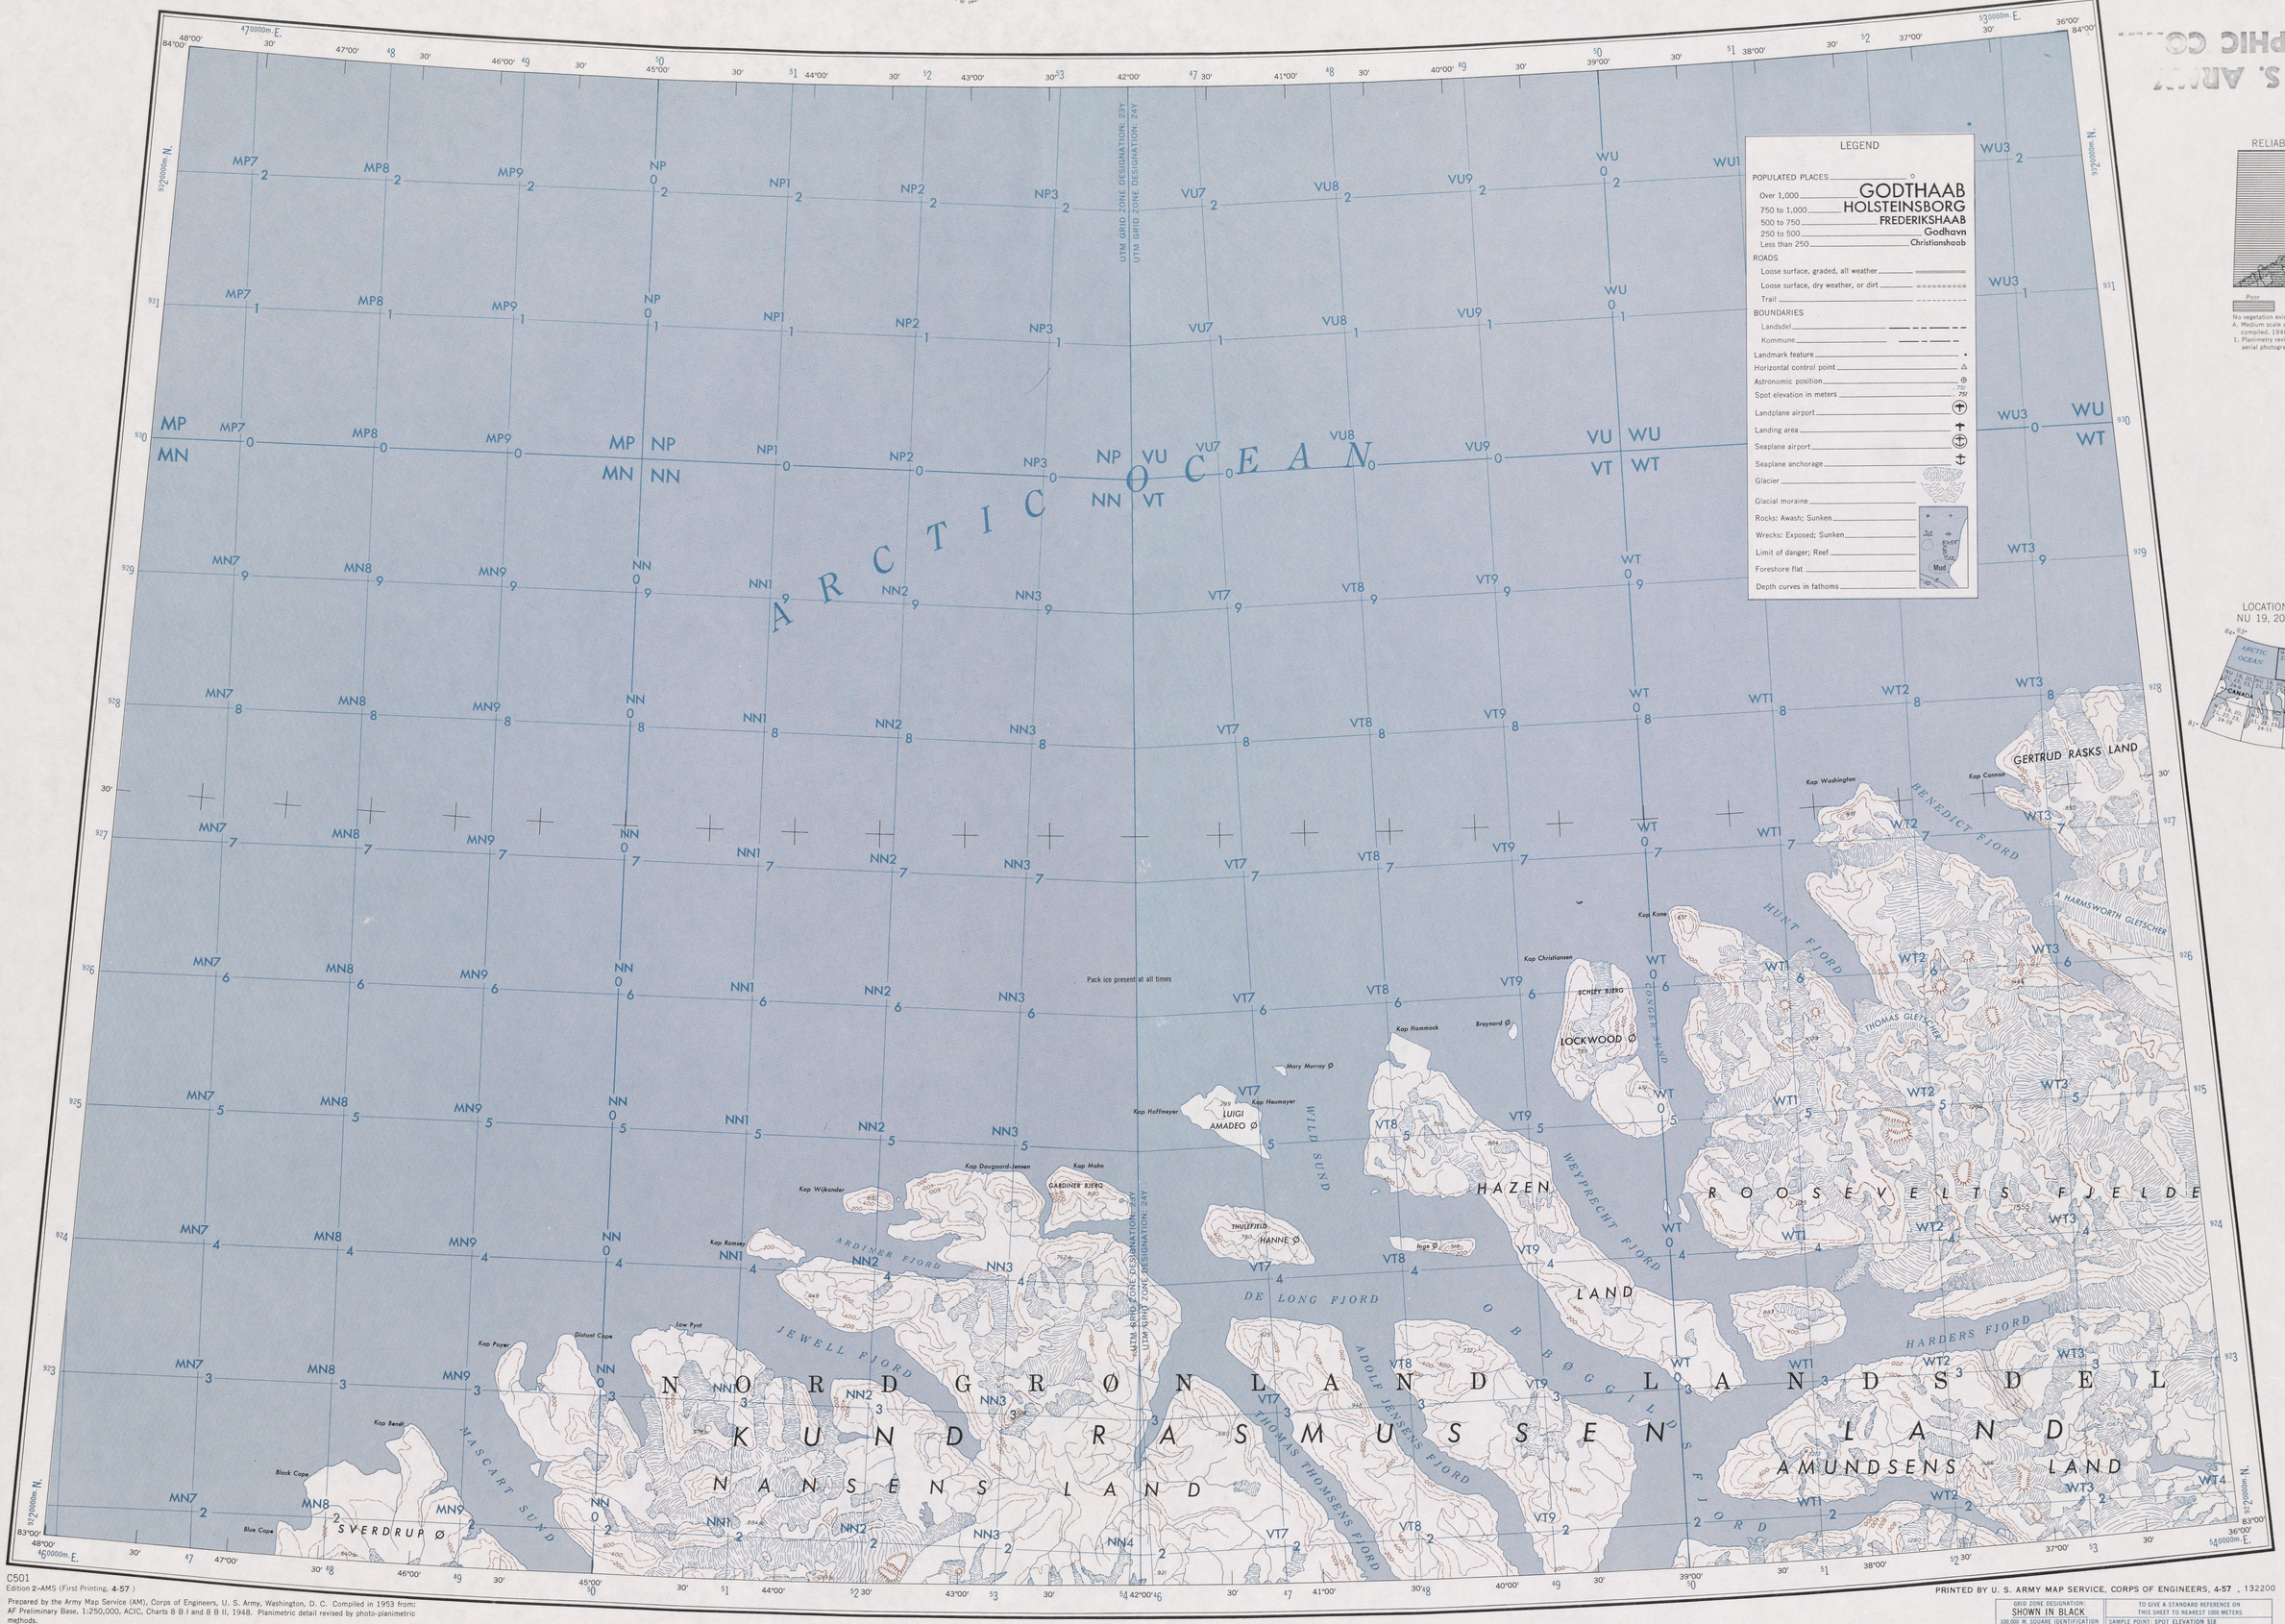

RELIABILITY DIAGRAM

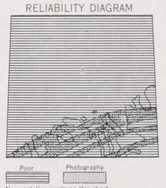

No vegetation exists on this sheet
A. Medium scale aeronautical charts compiled, 1948
1. Planimetry revised from 1947 aerial photography

LOCATION DIAGRAM FOR NU 19, 20, 21, 22, 23, 24-4

C501
Edition 2–AMS (First Printing, 4-57)

Prepared by the Army Map Service (AM), Corps of Engineers, U. S. Army, Washington, D. C. Compiled in 1953 from: AF Preliminary Base, 1:250,000, ACIC, Charts 8 B I and 8 B II, 1948. Planimetric detail revised by photo-planimetric methods.

Names data was taken directly from Danish sources, except that q Q has been used for ᴋ, K or ᴋ, K.

Universal Transverse Mercator grid, based upon a northward extension of the 6° zones, added by AMS, 1957

Scale 1:250,000

5 0 5 10 15 20 25 Statute Miles

5 0 5 10 15 20 25 30 35 Kilometers

5 0 5 10 15 Nautical Miles

INTERVAL OF APPROXIMATE CONTOURS 200 METERS
RELIEF PARTIALLY SHOWN BY FORM LINES AND HACHURES
TRANSVERSE MERCATOR PROJECTION
BLUE NUMBERED LINES INDICATE THE 10,000 METER UNIVERSAL TRANSVERSE MERCATOR GRID. ZONES 23 AND 24. INTERNATIONAL SPHEROID
THE LAST FOUR DIGITS OF THE GRID NUMBERS ARE OMITTED

1955 MAGNETIC DECLINATION FOR THIS SHEET VARIES FROM 67°15′ WESTERLY FOR THE CENTER OF THE WEST EDGE TO 52°15′ WESTERLY FOR THE CENTER OF THE EAST EDGE. MEAN ANNUAL CHANGE IS 24′ EASTERLY.

USERS NOTING ERRORS OR OMISSIONS ON THIS MAP ARE URGED TO MARK HEREON AND FORWARD DIRECTLY TO COMMANDING OFFICER, U. S. ARMY MAP SERVICE, WASHINGTON, D. C. MAPS SO FORWARDED WILL BE RETURNED OR REPLACED IF DESIRED.

GLOSSARY

Bjerg	mountain	Kap	cape
-fjeld, Fjelde	mountain(s)	Pynt	point
Fjord	fiord	Sund	sound
Gletscher	glacier	Ø	island

PRINTED BY U. S. ARMY MAP SERVICE, CORPS OF ENGINEERS, 4-57, 132200

GRID ZONE DESIGNATION:
SHOWN IN BLACK
100,000 M. SQUARE IDENTIFICATION
SHOWN IN BLUE
MP NP VU WU
93Q 93Q
MN NN VT WT
23Y 24Y
50 42° 50

IGNORE the SMALLER figures of any grid number; these are for finding the full coordinates. Use ONLY the LARGE figures in the grid number; e.g. 6 2 3 0 0 0

TO GIVE A STANDARD REFERENCE ON THIS SHEET TO NEAREST 1000 METERS

SAMPLE POINT: SPOT ELEVATION 518

1. Read letters identifying 100,000 meter square in which the point lies: VT
2. Locate first VERTICAL grid line to LEFT of point and read LARGE figure labeling the line either in the top or bottom margin, or on the line itself: 8
Estimate tenths from grid line to point: 4
3. Locate first HORIZONTAL grid line BELOW point and read LARGE figure labeling the line either in the left or right margin, or on the line itself: 4
Estimate tenths from grid line to point: 2

SAMPLE REFERENCE: VT8442

If reporting beyond 18° in any direction, prefix Grid Zone Designation, as: 24VT8442

U.S. ARMY MAP
G3380s 250 .G5

FOREIGN SET

LOCKWOOD Ø, GREENLAND